

KARMA[®]
www.karmaitaliana.it

GT 1227SW

25W MEGAPHONE

INSTRUCTION MANUAL

E

Congratulations for your choice!

Congratulations for your choice! The Karma product you have purchased is the result of careful planning by specialized engineers .

High quality materials have been used for its construction, to ensure its functioning over time.

The product is manufactured in compliance with strict regulations imposed by the European Union, a guarantee of reliability and safety.

Please read this manual carefully before starting to use the fixture in order to exploit its full potential.

Karma has several products' accessories that can complete your device.

We invite you to see the whole range of our products by visiting our website:

www.karmaitaliana.it

where you will find , in addition to all our items, detailed descriptions and further documents related to the product.

We hope that you will be satisfied with your purchase and we thank you again for your trust in our brand.

SAFETY NOTES

- Keep this User Manual for future reference. If you sell the product to another user, be sure to give this manual to the next owner.
- Make sure that the batteries are always charged
- This product is suitable for outdoor use, but must be protected from direct contact with water
- Don't use the product in an ambient temperature higher than 40°.
- In case of a serious operating problem, stop using the product immediately. Never try to repair the product by yourself, but contact the authorized technical assistance center. Repairs carried out by untrained people can damage the fixture



This symbol alerts you to the presence of important operating and maintenance, in the manual or in the documentation accompanying the product.



The CE mark indicates that the product complies with the European Community Standard EMC (Electro Magnetic Compatibility). Compliance documentation in complete form is available at the company Karma Italian Srl.



Pursuant to Italian Legislative Decree 49 dated 14 March 2014 on “Implementation of Directive 2012/19/UE on Waste Electrical and Electronic Equipment (RAEE)”

The symbol of the crossed-out wheeled bin shown on the device or its packaging indicates that, at the end of its service life, the product must be collected separately from other wastes.

The user must therefore consign it complete with all its main components to a suitable separate

collection centre for electrical and electronic wastes, or confer it to a shop of electrical and electronic equipment when purchasing an equivalent product. Suitable separate collection allows the discarded equipment to be sent for recycling, treatment and disposal in an environmentally friendly way, and helps to avoid possible negative effects on health and environment, promoting the recycling of the materials of which the device is composed. Illegal disposal of the product by the user may result in the application of the sanctions envisaged by applicable law. by the user entails the application of administrative sanctions pursuant to Legislative Decree N° 49 del 14 March 2014.

ITEM DESCRIPTION



N°	Function/ Description
1	Horn
2	Siren/ whistle selector
3	ON/ OFF switch
4	Handle
5	Battery cover clip
6	Battery compartment
7	Microphone
8	Volume control

OPERATING INSTRUCTIONS

- 1) First of all open the battery compartment (6) by pressing and lifting the opening clip(5).
- 2) Lift the microphone (7) and insert 8 batteries (C) respecting the polarities indicated. We suggest checking the battery status periodically for a performant and prolonged use.
- 3) Replace the microphone (7) and close the battery compartment (6) making sure to lock it with the specific clip (5).
- 4) Position the rotating volume control (8) about halfway.
- 5) Check that the SIREN / WHISTLE selector (2) is positioned on "TALK". If you wish to use one of the two functions (SIREN or WHISTLE), switch the selector on the desired option.
- 6) Hold the megaphone about 2-3 cm from the mouth and press the power button (3) to start talking .
- 7) The siren function produces a very loud alarm sound audible also from a long distance. To activate it, just switch the selector (2) on SIREN.
- 8) To use the whistle function, switch the selector on WHISTLE and press the power button (3). In this way the megaphone will produce a continuous sound. To stop it, release the power button.

Problem solving

- 1) If the megaphone does not work, first remove the batteries and check that they are charged.
- 2) Check that the batteries are correctly positioned in the compartment and adhering to contacts.
- 3) If the megaphone still doesn't work correctly, please contact our technical service. Don't try to repair the megaphone by yourself to avoid further damages to the device.