


USING THE CD/MPE PLAYER DESCRIPTION OF THE CONTROLS

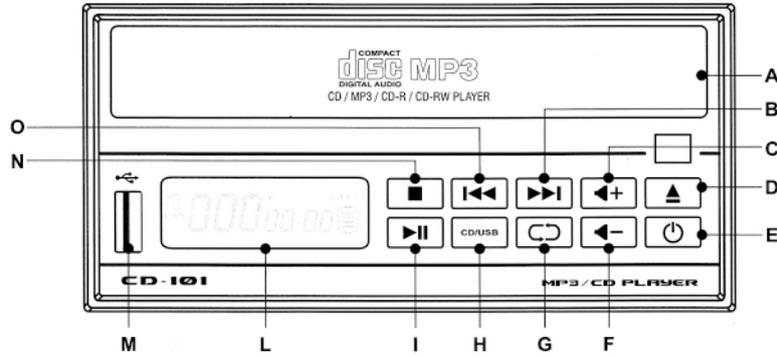

	Key for switching on player.		Last track.
	This key enables the CD drive to be opened/closed. If it is pressed with the player at a standstill or while it is playing, the disc will be ejected from the drive.		Pressed one with the player at a standstill or paused, the disc will be played or resumed. pressed once with the player running, it will pause the playing until the key is pressed again.
	Volume adjustment.		By pressing this key, you will be able to repeat the track that has just been selected, the whole sequence or random order.
	Next track.		By pressing this key, the disc playing will be stopped.
			By pressing this key, you will be able to switch from the CD mode to the USB mode and vice versa.

- 1) Switch on the equipment and start the player by pressing the (E) key.
- 2) The player will activate and the display will light up, indicating whether there is already a compact disc in the drive or not.
- 3) Press the key again to close the drive. The display will show the total number of tracks.
- 4) The first track starts to play out automatically.
If this does not happen, press (I).

*.mp3 files

As already described for audio CDs, the *.mp3 files will start to play automatically once the CD has been inserted into the CD drive or after inserting a USB key in the socket provided for it (M). With the drive at a standstill, the display will show the number of folders present on the disk and the total number of tracks.

To switch from the CD mode to the USB mode and vice versa, press (H).

NOTE: To stop playing, press (N) once. If you press (D) the disk will be ejected, whether the player is off or is playing.

Description of the functions

A) REPEAT and RANDOM functions

These functions allow one or more tracks to be repeated as required or random selection of the track to be played. To switch from one mode to another simply press (G). Three symbols are associated with this mode:

- .REP To repeat the track selected.
- .ALL To repeat all the tracks.
- .RAN To play out the tracks in random order.



B) Normal playing

This is the standard operating mode, that is to say, playing the tracks in the pre-defined order. Press (I) to start playing track 1.