


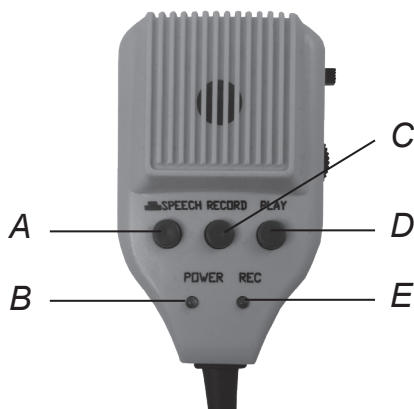

Una volta impostato il megafono in modalità power on, il LED power (B) si accenderà fisso, ma il microfono non sarà ancora attivo.

Di seguito le modalità di funzionamento:

SPEECH

Per attivare il microfono, premere il pulsante SPEECH (A); il LED power (B) lampeggerà ad indicare l'attivazione del microfono.

REC

Sempre in modalità power on premere il pulsante REC (C): il relativo LED (E) si accenderà ad indicare l'avvio nella modalità registrazione. Ripremetelo per interrompere la registrazione.

PLAY

Premete il pulsante play (D) per riprodurre la registrazione effettuata. Ripremetelo per interrompere la riproduzione.

Once the megaphone is set in power on mode, the power LED (B) is steady on, but the microphone is not active yet.

Below are the operating modes:

SPEECH

To activate the microphone, press the SPEECH button (A); the power LED (B) will flash to indicate the microphone is activated.

REC

Always in power on mode, press the REC (C) button: the related LED (E) will light up to indicate recording mode has started. Press the button again to stop recording.

PLAY

Press the play button (D) to play the recorded audio. Press it again to stop playing.