



PAR COB 630

Manuel d'utilisation / User manual

1. AVANT DE COMMENCER

1.1 Que contient l'emballage

- 1 – Un PAR COB 630
- 2 – Un manuel d'utilisation

1.2 Consignes de déballage

Immédiatement après réception d'un appareil, déballez soigneusement le carton, vérifiez le contenu pour vous assurer que toutes les pièces sont présentes et qu'elles ont été reçues en bon état. En cas de manquement ou de bien vous semblant endommagées, avisez immédiatement l'expéditeur et conservez le matériel d'emballage à des fins de vérification. Faites de même si l'emballage vous semble endommagé ou n'avoir pas été manipulé convenablement.

Conservez le carton et tous les matériaux d'emballage. Dans le cas où un appareil doit être retourné sous garantie, il est important qu'il soit retourné dans la boîte d'origine et l'emballage d'origine.

1.3 Consignes de sécurité (lisez attentivement ce manuel d'utilisation)



- * S'il vous plaît garder ce manuel d'utilisation pour une future consultation. Si vous vendez l'appareil à un autre utilisateur, assurez-vous de lui transmettre.
- * Assurez-vous toujours que vous vous connectez à la tension appropriée et que la tension de ligne à laquelle vous vous connectez n'est pas plus élevée que celle indiquée sur l'autocollant ou le panneau arrière de l'appareil.
- * Ce produit est destiné à une utilisation en intérieur uniquement!
 - Pour éviter tout risque d'incendie ou de choc, n'exposez pas le stroboscope à la pluie ou à l'humidité. Assurez-vous qu'il n'y a pas de matériaux inflammables à proximité de l'appareil pendant le fonctionnement.
 - Ne pas utiliser l'appareil sans lampe ou si le boîtier est endommagé
 - Il est impératif de ne jamais regarder directement la source lumineuse sous risque de graves séquelles oculaires. ATTENTION aux émissions des Leds qui pourraient blesser ou irriter l'œil.
 - Ne pas utiliser en présence de personnes souffrant d'épilepsie
- * L'unité doit être installée dans un endroit avec une ventilation adéquate, à au moins 50 cm des surfaces adjacentes. Assurez-vous que les fentes d'aération ne sont pas obstruées.
- * Débranchez toujours la source d'alimentation avant de procéder à l'entretien ou au remplacement du fusible et veillez à remplacer le même.
- * En cas de problème de fonctionnement sérieux, arrêtez immédiatement d'utiliser l'appareil. N'essayez jamais de réparer l'unité par vous-même. Les réparations effectuées par des personnes non qualifiées peuvent entraîner des dommages ou des dysfonctionnements. Veuillez contacter le centre d'assistance technique agréé le plus proche. Utilisez toujours les mêmes pièces de rechange.
- * Assurez-vous que le cordon d'alimentation n'est jamais endommagé.
- * Ne débranchez jamais le cordon d'alimentation en tirant sur le cordon.
- Ne pas utiliser cet appareil dans des conditions de température ambiante supérieur à 45°C ou 113 ° F.

1.4 Consignes d'installation

- * Ce produit peut être monté en suspension grâce à la lyre de fixation. Cette lyre peut être fixée sur une structure ou un pont de manière sécurisée, une élingue supplémentaire reste obligatoire.
- * Le produit doit être correctement fixé afin d'éviter toute vibration ou glissement lorsque celui-ci est en marche. Assurez-vous que la structure puisse supporter 10 fois le poids de l'appareil. Utilisez des élingues de sécurité pouvant supporter 12 fois le poids de l'appareil. Le produit doit être fixé par du personnel qualifié.

2. CARACTERISTIQUES TECHNIQUES

PAR COB 6 x 15W RGB

- * PAR COB 6 x 15W RGB
- * Source lumineuse : LED COB 6 x 15 W
- * Lumen : 4140 Lux@1m
(Rouge 640 Lux@1m/ Vert 1500 Lux@1m/ Bleu 2000 Lux@1m)
- * Canaux DMX: 7
- * Mode de pilotage: Auto, DMX, Maître-esclave, musical
- * Dimmer linéaire/ Strobe
- * Consommation: 85W
- * Angle d'ouverture: 60°
- * Alimentation: AC110-240V, 50/60Hz

- * Dimensions: 250 x 100 x 250 mm
- * Poids net: 1,250kg

3. FONCTIONS

Il y a 4 boutons et 4 voyants LED pour choisir différents modes de travail.

Quand l'appareil est allumé, l'affichage LED numérique fonctionne avec des points rouges, quand il y a l'entrée du signal DMX, le point sera brillant.


Réglage de l'adresse DMX : Presser la touche "MENU", lorsque la LED affiche d001-d512, presser "UP" ou "Down", et choisir le code DMX de 001-512.

Réglage du code IP : Presser la touche "MENU", lorsque la LED affiche IP.01-IP.64, presser "UP" ou "DOWN", et choisir le code de 001-512.

D001-D512 DMX Mode
Auxx- Au01→Color mixing 1
Auxx- Au02→Color mixing 2
Auxx- Au03→Color mixing 3
Auxx- Au04→Color mixing 4
Auxx- Au05→Color mixing 5
Auxx- Au06→Color mixing 6
Auxx- Au07→Color mixing 7
Auxx- Au08→Color mixing 8
Auxx- Au09→Color mixing 9
Auxx- Au10→Gradual Change
So01→Sound control jump change
So02→Sound control strobe
St00 -St00 →Auto Master without Strobe
-St01 →St16→Auto master strobe speed from slow to fast
SP00-SP16→Auto master Au01 Au09 Au10 speed from slow to fast.
R020-R255 →Red max brightness set
G020-G255→Green max brightness set
B020-B255→Blue max brightness set

Une fois le projecteur disponible pour recevoir le signal DMX, connecter le câble DMX au panel marqué "DMX IN" et le relier au second projecteur, puis, connecter au "DMX IN" du suivant au "DMX OUT", La terminaison du signal DMX est recommandée lorsque le signal lumineux est activé. Cela évitera d'interférer avec le signal. La terminaison DMX est un connecteur XLR, à connecter avec une résistance 120Ω entre la broche 2 et la broche 3 du connecteur XLR, et connecter à la prise OUTPUT du dernier projecteur.

Voir image :

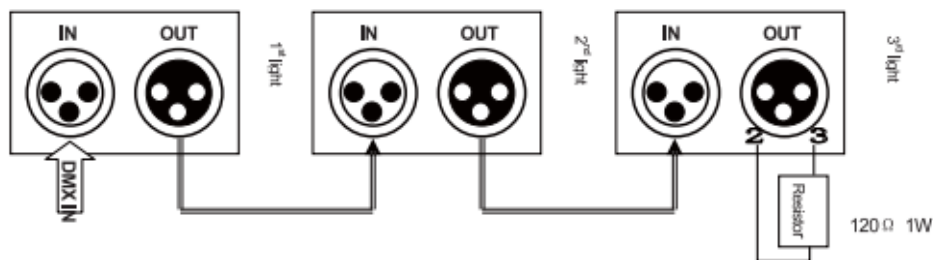

4. CANAUX DMX

Channel	Channel address	Function
CH 1	0-255	Dimmer
CH 2	1-255	Strobe
CH 3	1-255	Macro function
CH 4	0-255	Macro function speed adjust
CH 5	0-255	Red dimming
CH 6	0-255	Green dimming
CH 7	0-255	Blue dimming

5. DEPANNAGE

Vous trouverez ci-dessous une liste de problèmes qui pourraient survenir lors de l'utilisation de votre appareil. Nous vous apportons quelques suggestions pour remédier facilement à la situation.

1. L'appareil ne fonctionne pas, il n'y a pas de lumière :
 - A. Vérifier les branchements de l'alimentation et du fusible
 - B. Vérifier la tension du secteur
2. L'appareil ne répond pas au contrôleur DMX :
 - A. La LED DMX doit être allumée. Si ce n'est pas le cas, vérifiez les connecteurs et les câbles pour voir si le raccordement est correct.
 - B. Si la LED DMX est allumée et que le canal ne répond pas, vérifiez les réglages de l'adresse et la polarité du signal DMX
 - C. Si vous rencontrez des problèmes avec le signal DMX de façon intermittente, vérifiez les connecteurs ou la carte électronique de l'appareil défectueux ainsi que de l'appareil précédent.
 - D. Essayez d'utiliser un autre contrôleur DMX
 - E. Vérifiez l'absence d'interférence entre les câbles électriques

POUR TOUT PROBLEME DE PANNE, VEUILLEZ CONTACTER VOTRE REVENDUEUR

5. ENTRETIEN DE L'APPAREIL

Le nettoyage du système d'optique externe de l'appareil doit être fait régulièrement;

1. Nettoyez l'appareil avec un chiffon doux et utilisez un liquide de nettoyage pour vitres
2. Il est toujours recommandé d'essuyer correctement toutes les pièces de l'appareil



Est une marque déposée de la Société Expelec SA



EXPELEC
DEVELOP YOUR SENSES



www.expelec.fr



commercial@expelec.fr



33 (0)4.50.60.80.20



55 Route de la Fillière
74370 Charvonnex - France



PAR COB 630

Manuel d'utilisation / User manual

1. Before you begin

1.1 What are included

- 1) 1 x AURA STROB
- 2) User Manual

1.2 Unpacking Instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.



1.3 Safety Instructions

Please read these instructions carefully, which includes important information about the installation, usage and maintenance .

- * Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
- * Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on decal or rear panel of the fixture.
- * This product is intended for indoor use only!
- * To prevent risk of fire or shock, do not expose fixture to rain or moisture. Make sure there are no flammable materials close to the unit while operating.
- * DO NOT look directly at the light while the fixture is on
- * The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
- * Always disconnect from power source before servicing or replacing lamp or fuse and be sure to replace with same lamp source.
- * In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- * Don't connect the device to a dimmer pack.
- * Make sure power cord is never crimped or damaged.
- * Never disconnect power cord by pulling or tugging on the cord.
- * Don't operate this device under 113° F ambient temperature conditions.

1.4 INSTALLATION

The unit should be mounted by its screws holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. The structure to which you are attaching the unit should be able to support 10 times the weight of the unit. Also always use a safety cable that can hold 12 times the weight of the unit when installing the fixture. The equipment must be fixed by professionals.

2. TECHNICAL SPECIFICATIONS

6 x 30W COB PAR RGB

- * 6 x 15W RGB COB PAR
- * Light source : 6x15W COB LED
- * Lumens : 4140 Lux@1m
(Red 640 Lux@1m/ Green 1500 Lux@1m/ Blue 2000 Lux@1m)
- * DMX channels : 7
- * Operation Modes : Auto, DMX, Master/Slave, Sound active
- * Linear Dimming / Strobe
- * Power consumption : 85 W
- * Beam angle : 60°
- * Voltage : AC110-240V, 50/60Hz

- * Dimensions : 250 x 100 x 250 mm
- * Net Weight : 1,250 kg

3. MENU

There are 4 buttons and 4 bit LED displays on the operation panel for choosing different working modes, choosing certain working mode via pressing these buttons, and it shows up on the LED display.

When power is on, the digital LED display works with red dots, when there is inputting DMX signal, the dot will be shiny.

DMX address code setting: Press key "MENU", when the digital LED displays d001-d512, then press "UP" or "Down", you can set the address code, the code ranges from 001-512.

IP code setting: Press key "MENU", when the digital LED display IP.01-IP.64, then press "UP" or "DOWN", you can set the address code, the code ranges from 001-512.

D001-D512 DMX Mode

Auxx- Au01→Color mixing 1

Auxx- Au02→Color mixing 2

Auxx- Au03→Color mixing 3

Auxx- Au04→Color mixing 4

Auxx- Au05→Color mixing 5

Auxx- Au06→Color mixing 6

Auxx- Au07→Color mixing 7

Auxx- Au08→Color mixing 8

Auxx- Au09→Color mixing 9

Auxx- Au10→Gradual Change

So01→Sound control jump change

So02→Sound control strobe

St00 -St00 →Auto Master without Strobe

-St01 →St16→Auto master strobe speed from slow to fast

SP00-SP16→Auto master Au01 Au09 Au10 speed from slow to fast.


R020-R255 →Red max brightness set

G020-G255→Green max brightness set

B020-B255→Blue max brightness set

The light is available to receive the DMX512 signal, connect the DMX connector to the panel which marked with "DMX IN", and connect it to the next light, then, connect to the "DMX IN" of next light from the "DMX OUT", The DMX signal terminator is recommended when the lighting signal is connecting. It will avoid to interfere the signal which caused by the electrical noise. DMX terminator is a XLR connector, connect with a 120Ω resistor between the pin 2 and pin 3 of the XLR connector, and connect it to the OUTPUT socket of the final light

See picture:

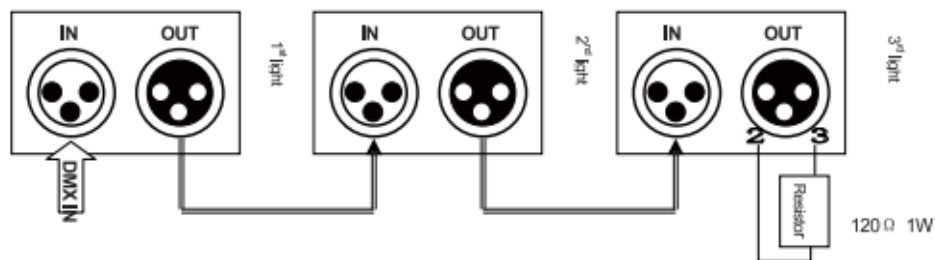

4. DMX CHANNELS

Channel	Channel address	Function
CH 1	0-255	Dimmer
CH 2	1-255	Strobe
CH 3	1-255	Macro function
CH 4	0-255	Macro function speed adjust
CH 5	0-255	Red dimming
CH 6	0-255	Green dimming
CH 7	0-255	Blue dimming

4. TROUBLESHOOTING

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

1. The fixture doesn't work, no light :
 1. Check the connection of power and main fuse
 2. Measure the main voltage on the main connector
2. The fixture does not respond to DMX controller :
 1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly
 2. If the DMX LED is on and no response to the channel, check the address settings and DMX polarity
 3. If you have intermittent DMX signal problems, check the pins on connectors or on PCB of the fixture or the previous one
 4. Try to use another DMX controller
 5. Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit

FOR ANY PROBLEM OR MALFUNCTION, PLEASE CONTACT YOUR RESELLER

5. MAINTENANCE AND CLEANING

Clean with soft cloth

Always dry to parts carefully



est une marque déposée de la société Expelec SA



www.expelec.fr



commercial@expelec.fr



33(0)4.50.60.80.20



55 Route de la Fillière
74370 Charvonnex - France