


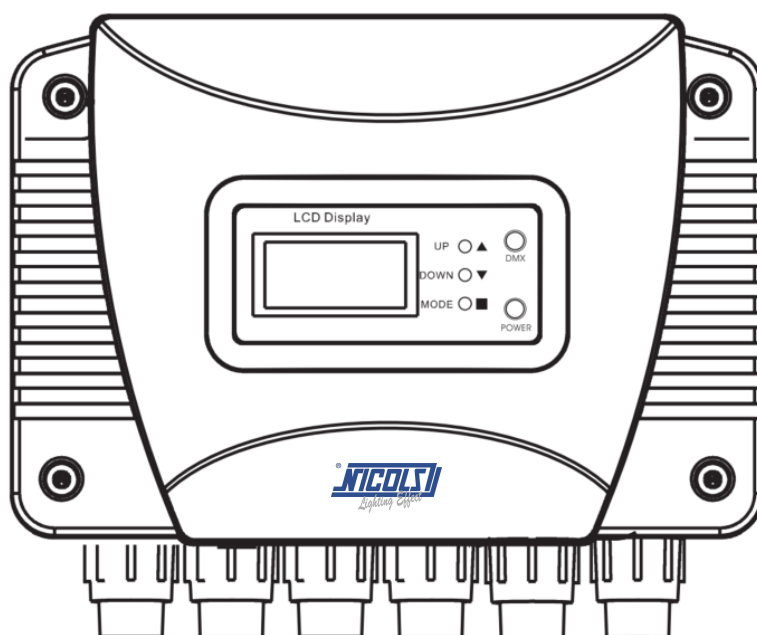

SPLIT DMX IP

Manuel d'utilisation / user manuel

Félicitations pour l'achat de votre nouveau distributeur DMX. Le SPLIT DMX IP a une entrée et quatre sorties. L'unité est isolée électriquement entre l'entrée et la sortie, elle est équipée de connecteurs PG9 (3 broches) pour chaque canal, chaque sortie DMX dispose d'un pilote indépendant. Une LED vous indique la validité du signal.

Nous vous recommandons fortement de prendre le temps de lire ce manuel entièrement avant d'utiliser le distributeur DMX

Immédiatement après réception d'un appareil, déballez soigneusement le carton, vérifiez le contenu pour vous assurer que toutes les pièces sont présentes et qu'elles ont été reçues en bon état. En cas de manquement ou de bien vous semblant endommagées, avisez immédiatement l'expéditeur et conservez le matériel d'emballage à des fins de vérification. Faites de même si l'emballage vous semble endommagé ou n'avoir pas été manipulé convenablement.

Conservez le carton et tous les matériaux d'emballage. Dans le cas où un appareil doit être retourné sous garantie, il est important qu'il soit retourné dans la boîte d'origine et l'emballage d'origine.




Consignes de sécurité (lisez attentivement ce manuel d'utilisation)

- * S'il vous plaît garder ce manuel d'utilisation pour une future consultation. Si vous vendez l'appareil à un autre utilisateur, assurez-vous de lui transmettre.
- * Assurez-vous toujours que vous vous connectez à la tension appropriée et que la tension de ligne à laquelle vous vous connectez n'est pas plus élevée que celle indiquée sur l'autocollant ou le panneau arrière de l'appareil.
- * Assurez-vous qu'il n'y a pas de matériaux inflammables à proximité de l'appareil pendant le fonctionnement.
- * L'unité doit être installée dans un endroit avec une ventilation adéquate, à au moins 50 cm des surfaces adjacentes. Assurez-vous que les fentes d'aération ne sont pas obstruées.
- * Débranchez toujours la source d'alimentation avant de procéder à l'entretien ou au remplacement du fusible et veillez à remplacer le même.
- * En cas de problème de fonctionnement sérieux, arrêtez immédiatement d'utiliser l'appareil. N'essayez jamais de réparer l'unité par vous-même. Les réparations effectuées par des personnes non qualifiées peuvent entraîner des dommages ou des dysfonctionnements. Veuillez contacter le centre d'assistance technique agréé le plus proche. Utilisez toujours les mêmes pièces de rechange.
- * Assurez-vous que le cordon d'alimentation n'est jamais endommagé.
- * Ne débranchez jamais le cordon d'alimentation en tirant sur le cordon.
- * Ne pas utiliser cet appareil dans des conditions de température ambiante supérieur à 45°C ou 113 ° F.


1.Specifications techniques

Puissance d'entrée.....	AC100~240V 50/60Hz
Fusible(interne)	F0,9A 250V
Dimensions	210X170X70MM
Poids.....	0.7KG

2. Présentation

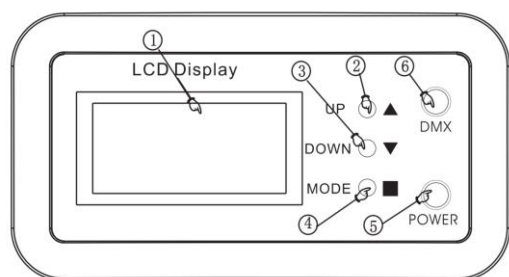

N°	Description	Fonction
1	Afficheur	Indique les valeurs DATA
2	UP	Change le menu de l'afficheur
3	Down	Change le menu de l'afficheur
4	Mode	Permet la selection des fonctions
5	Led Power (rouge)	Indique que l'appareil est en alimenté
6	LED DMX (Verte)	Indique que le signal DMX est OK

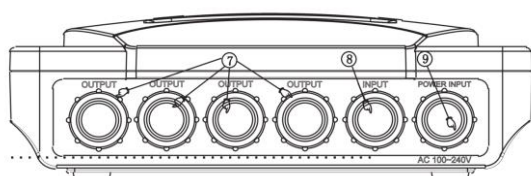


N°	Description	Fonction
7	DMX out	Sorties DMX
8	DMX in	Entrée DMX
9	Power in	Entrée d'alimentation électrique


3. Sélection du canal DMX pour voir la valeur sur l'afficheur

En Cxxx	Canaux DMX
001	000 000 (canal 1,2)
002	000 000 (canal 2,3)
003	000 000 (canal 3,4)
004	000 000 (canal 4,5)
.....	
512	000 000 (canal 512)

2. Fonctionnement du menu

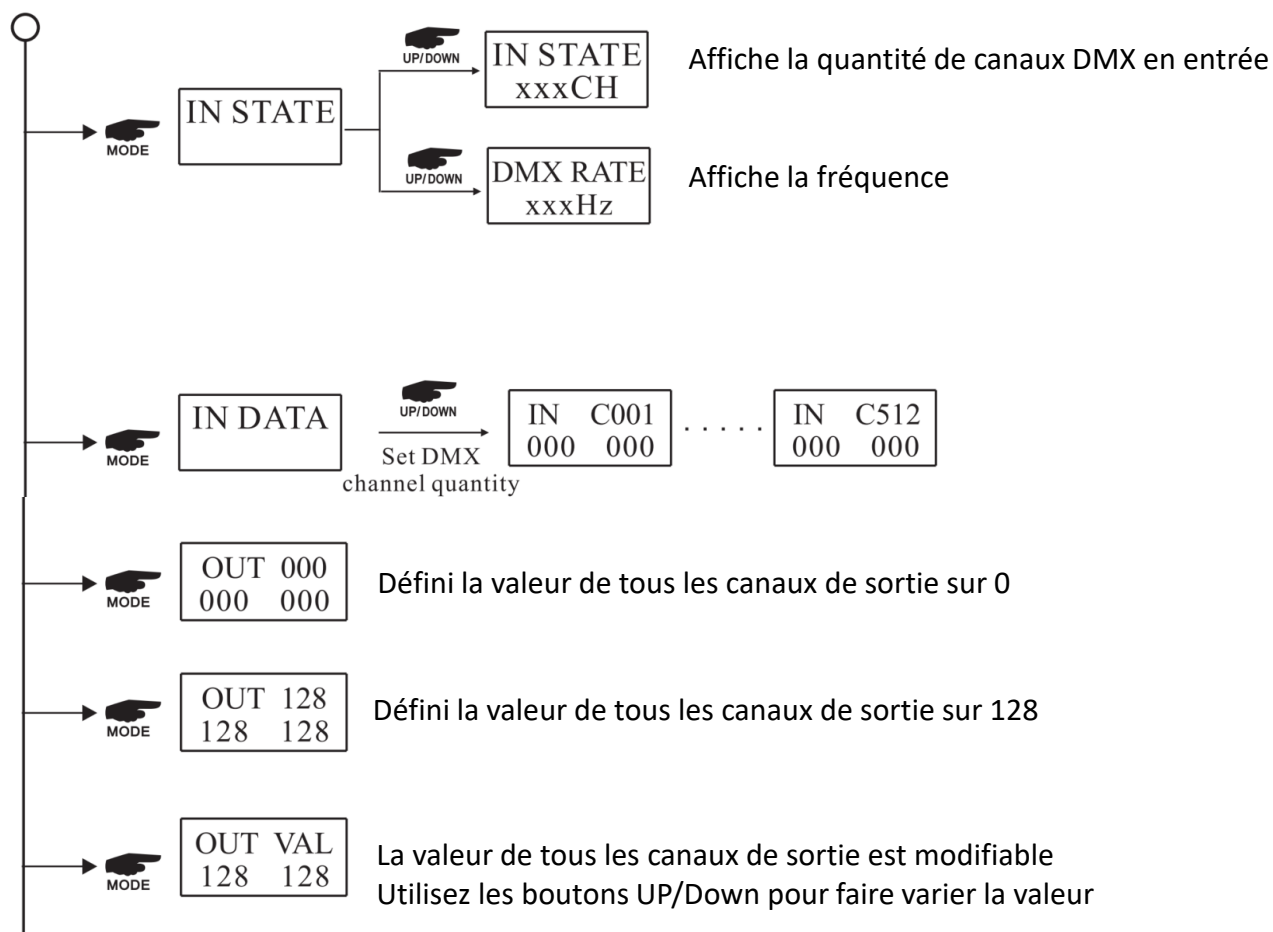

3.4 Raccordement de l'appareil

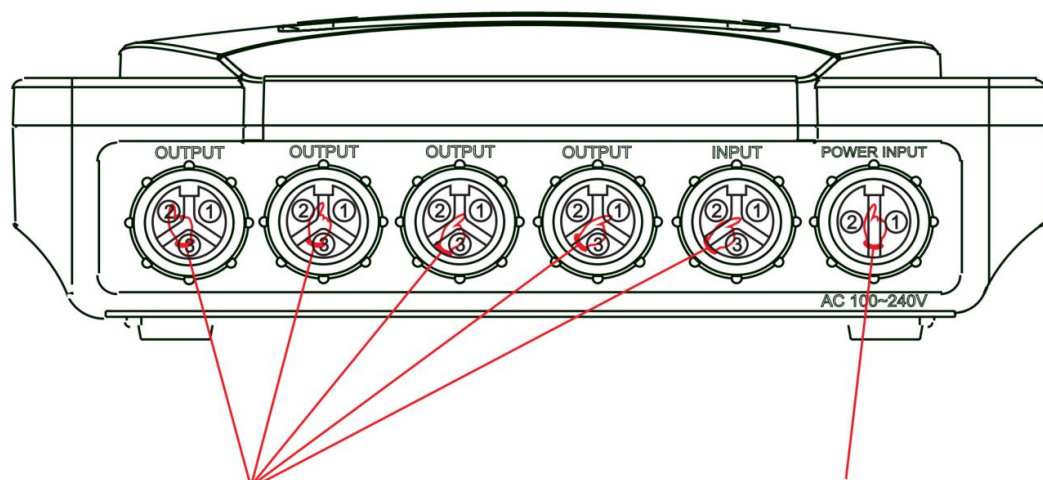


Connecteur DMX




- 1 – Terre
- 2 – Signal (-)
- 3 – Signal (+)

Connecteur d'alimentation AC



- 1 – Phase (L)
- 2 – Neutre (N)

Raccordement des connecteurs

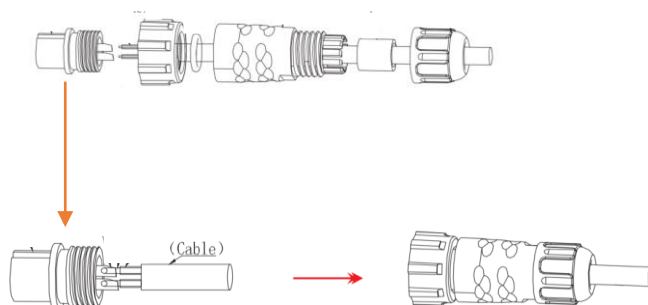


est une marque déposée de la société Expelec SA


www.expelec.fr

33 (0)4.50.60.80.20


commercial@expelec.fr

55 Route de la Fillière
74370 Charvonnex - France

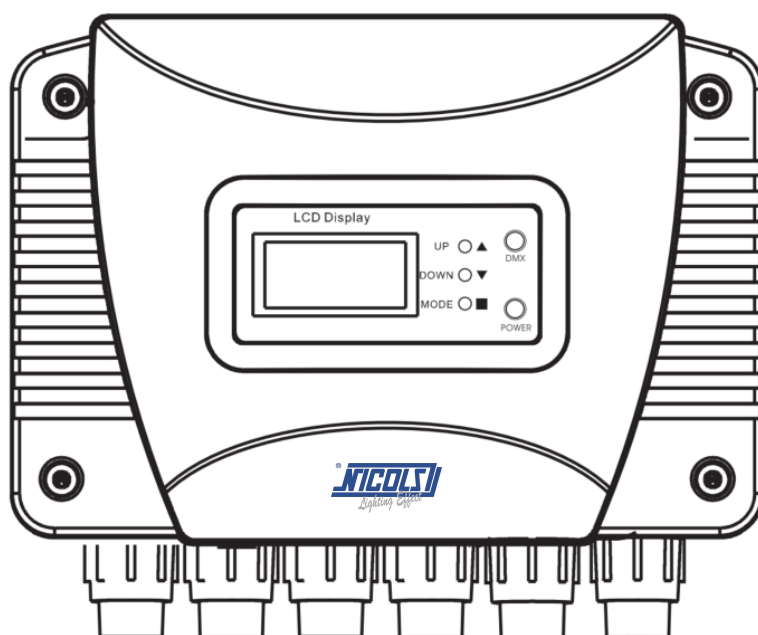

SPLIT DMX IP

Manuel d'utilisation / user manuel

Congratulations on purchasing your new DMX distributor . The unit has one input and four output. Absolutely electric isolation between input and output , GP9 connector (3pin) for each individual channel, each DMX output features a independent driver. There is a signal indicating lamp.

We strongly recommend that you take time to read this manual fully before you attempt to use the DMX distributor.

Unpacking Instructions

Immediately upon receiving a fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.



Safety Instructions


Please read these instructions carefully, which includes important information about the installation, usage and maintenance .

- * Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that they also receive this instruction booklet.
 - * Always make sure that you are connecting to the proper voltage and that the line voltage you are connecting to is not higher than that stated on decal or rear panel of the fixture.
 - * Make sure there are no flammable materials close to the unit while operating.
 - * The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.
 - * Always disconnect from power source before servicing or replacing lamp or fuse and be sure to replace with same lamp source.
 - * In the event of serious operating problem, stop using the unit immediately. Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center.
- Always use the same type spare parts.
- * Don't connect the device to a dimmer pack.
 - * Make sure power cord is never crimped or damaged.
 - * Never disconnect power cord by pulling or tugging on the cord.
 - Don't operate this device under 113° F ambient temperature conditions.


1. Technical specification

Power input	AC100~240V 50/60Hz
Fuse(internal)	F0,9A 250V
Dimension	210X170X70MM
Weight	0.7KG

2. Product overview

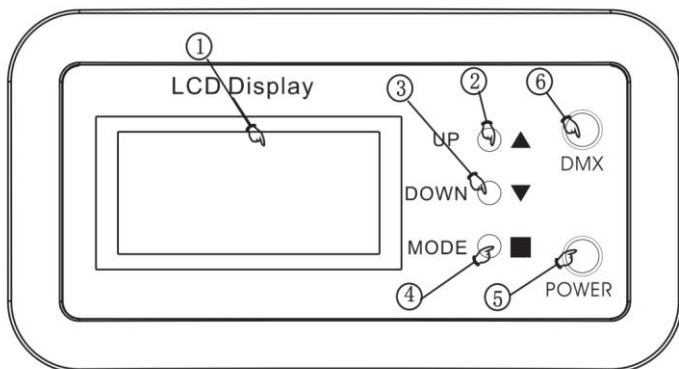

Item	Description	Function
1	LCD display	Display operation data
2	UP	Change setting of LCD display menu
3	DOWN	Change setting of LCD display menu
4	MODE	Operation menu selection (The upper line is current selected function)
5	Power light (red)	Keep ON while be connected to AC power
6	DMX signal input (green)	DMX512 signal input indicate light and it will keep flashing with DMX signal input

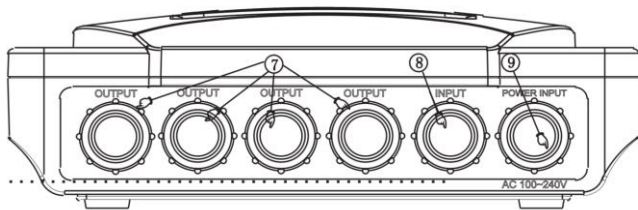


Item	Description	Function
7	DMX OUT	DMX 512 signal output
8	DMX IN	DMX 512 signal input
9	Power INPUT	AC 100-240V 50/60Hz


2. Select DMX channel to show it's value on display

IN Cxxx	DMX channel number
001	000 000 (Channel 1,2)
002	000 000 (Channel 2,3)
003	000 000 (Channel 3,4)
004	000 000 (Channel 4,5)
.....	
512	000 000 (Channel 512)

2. Display instruction

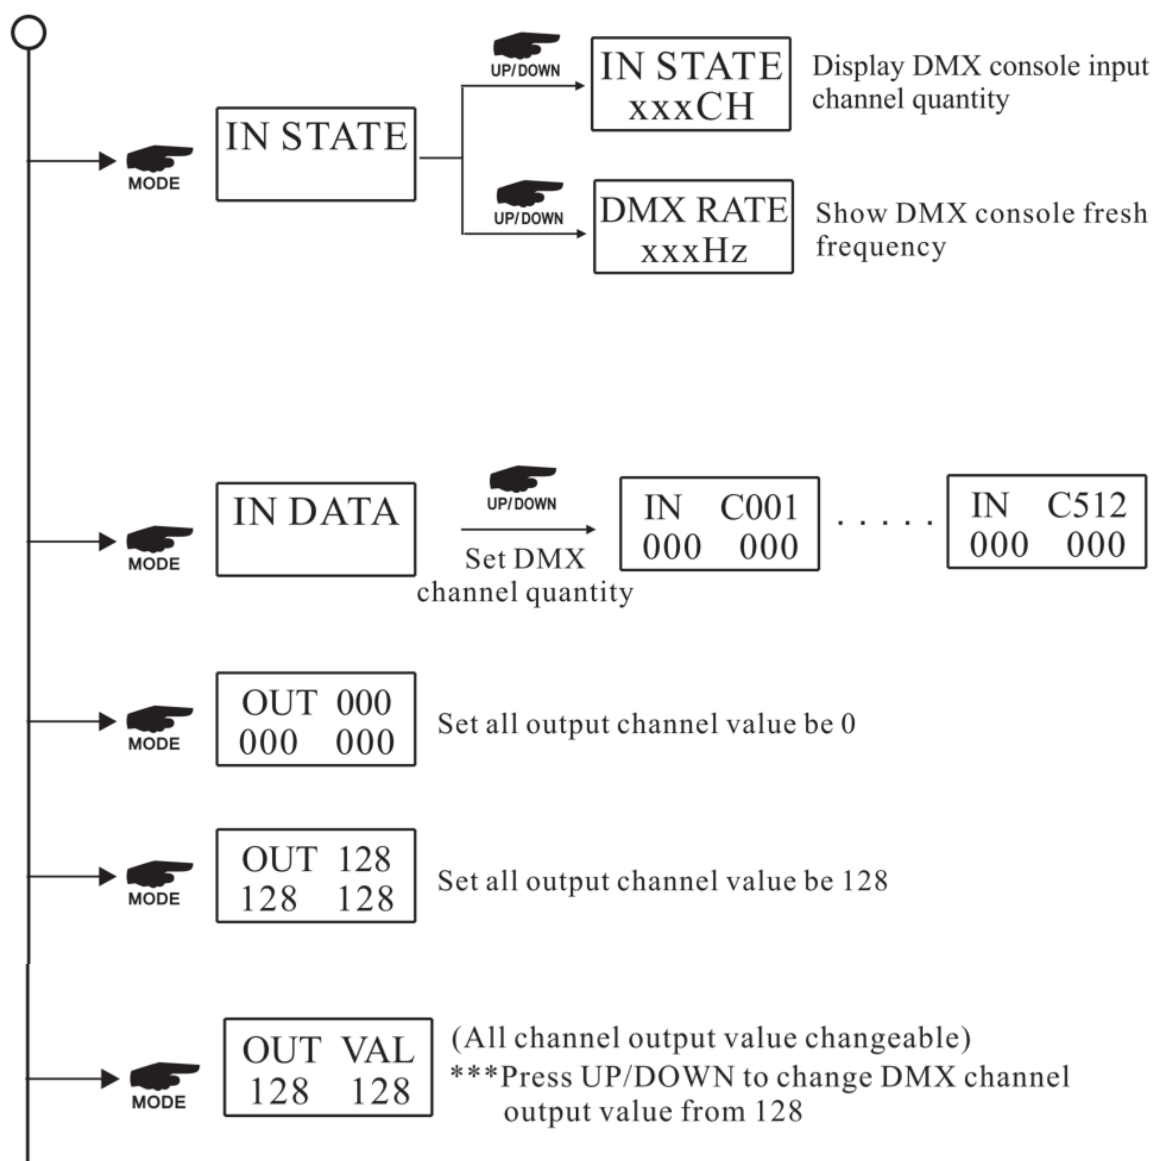

2. Wire connection drawing

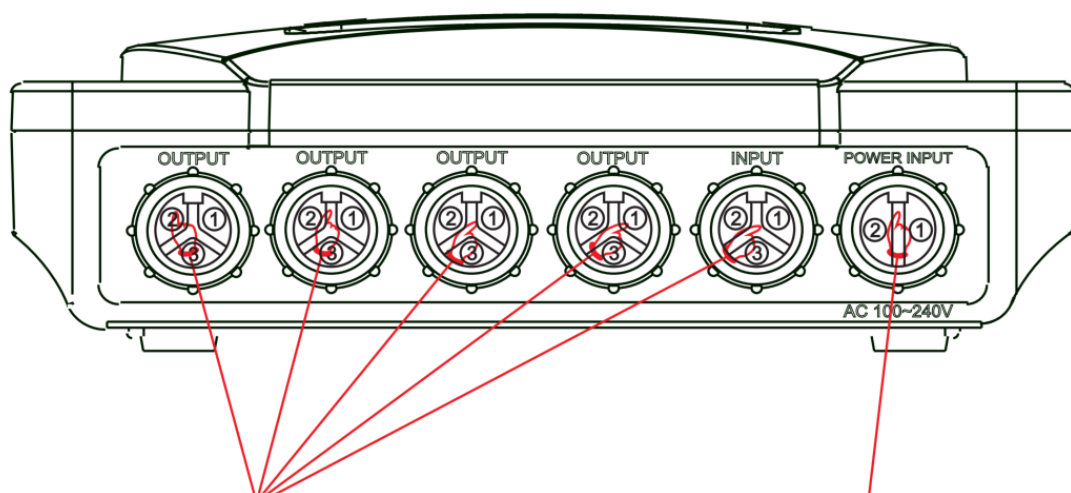


DMX signal connector




- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

AC Power connector

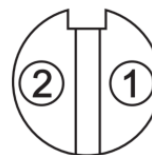

- 1 -Live(L)
- 2 -Natural(N)

set into components

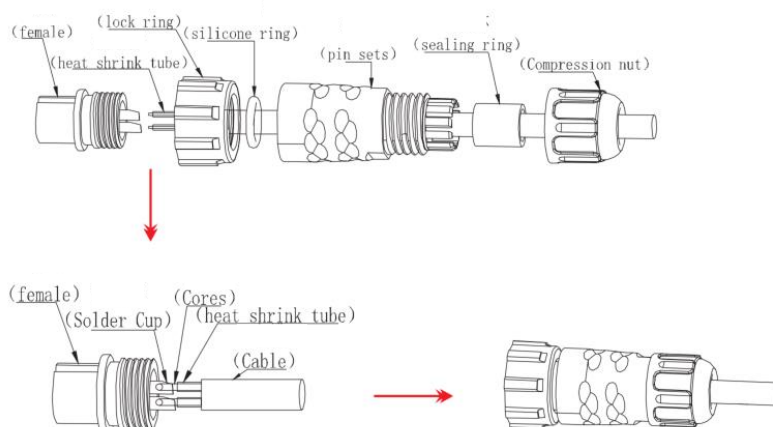

is a registered brand of Expelec SA company



www.expelec.fr

33 (0)4.50.60.80.20



commercial@expelec.fr

55 Route de la Fillière
74370 Charvonnex - France